


使用配套工具安装、拆解转子示意：
(Diagram of using matching tools to install and disassemble the rotor)

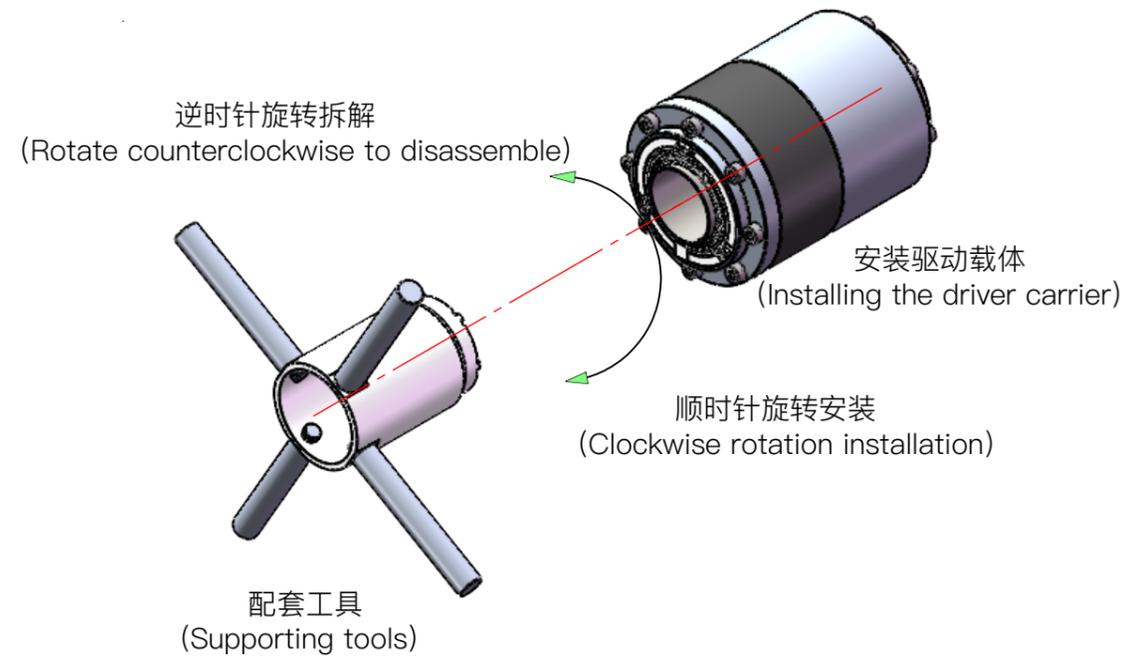

共四个公差安装尺寸，分别定位了 (There are four tolerance installation dimensions, which are located separately) :

- 1、输出端编码器转子的径向位置 (Radial position of the Shaft Encoder rotor) (D) ;
- 2、电机端编码器转子的径向位置 (Radial position of the Motor shaft Encoder rotor) (E) ;
- 3、编码器定子的径向位置 (The radial position of the Encoder stator) (F) ;
- 4、编码器转子与编码器定子相对轴向位置 (Relative axial position between Encoder rotor and Encoder stator) (G) ;

可尽可能还原出厂标定时位置状态已得到最佳数据精度
(It is possible to restore the position status during factory calibration as much as possible to obtain the best data accuracy) .

北京金钢科技有限公司
KingKong Technology

设计安装建议
Design and installation suggestions

比例 (scale) : 1:1